

M1BR3/M1R3/MM1P Compact Three Channel Mixer/Bi-Amp Monitor Speaker w/ Built-in Rechargeable Battery*

Quick Start Guide



Your M1BR3/M1R3/MM1P package contains the following:

- | | |
|---------------------------------------|-------------------------------|
| (1) Speaker | (1) Right Angle Speaker Cable |
| (1) 12V AC Power Supply Adaptor | (1) Quick Start Guide |
| (1) 12V DC Car Battery Supply Adapter | (1) Registration Card |

*Rechargeable battery available in M1BR3 and M1R3 only

** Bluetooth® available in M1BR3 models only

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Elite Acoustics Designs, Inc is under license

NOTE: Due to continuous development and improvements of our products, features and specifications are subject to change without notice. All weights and measures are approximate.

QUICK START

1. Make sure the SPEAKER VOLUME [8] control is down before you turn the POWER [14] on.
2. Connect the output of your microphone to the MIC IN [1]. Or you can connect a ¼" line input from an instrument [2]. Connect an additional mono or stereo [4]. A direct USB connection can be made via the USB port [16].
3. Connect the DC power cord to the back panel [14].
4. Turn on the POWER [14] switch
5. **For M1BR3 only, Connect device to Bluetooth
6. Turn on your signal(s) and adjust the volume on the source signal for normal operation. Note if you are using an iPhone or iPad via Bluetooth, set the volume on your device about halfway. Maximum volume will distort.
7. Adjust the SPEAKER VOLUME [8] to a comfortable level.
8. Turn up GAIN [3] and TRIM [5] until there is a solid green light showing "signal" at desired level, without a red "peak" light, indicating too much signal.
9. For USB charging of your source device, use USB Port [15]

Power LED: BLUE [9] Indicate unit is ON

Channel 1 [12]

Pan: split signal into Left/Right channel

Level: Volume Control

Peak LED: RED indicate Signal Clip

Signal LED: GREEN indicate Signal Present

Speaker

Speaker Volume [8]: Control speakers' volume level

Equalizer [10]: Adjust Speaker High, Mid, and Low Frequency response

Peak LED [9]: RED indicate Signal Clip

Signal LED [9]: GREEN indicate Signal Present

Aux Input/Level [11]: Connect audio source with 1/8" jack from MP3/CD player

Channel 1 input:

Gain [3] knob: Input Level control

Line In [2]: 1/4" TRS inputs

Mic In [1]: XLR for Microphone Input

 
Channel 2/3 input:

Trim Knob [5]: Input Level control

Left/Right channel input [4]: 1/4" TRS input

Main Right to SPK switch [6]: Right channel signal. When the button is up, only the Right channel mono signal is sent for connection to the L (mono) of additional speaker.

Main Right Output [6]: Connect with extra speakers/monitors




BLUETOOTH® FUNCTION

- To turn ON/OFF Bluetooth® function
PRESS/HOLD down MODE button for approximately 5 seconds
Both LEDs will flash at the same time
- To pair device to the speaker system
Bluetooth® needs to be turned ON
QUICK TAP the MODE button once
Both Flashing LED: indicate Bluetooth ® is ready to be paired
Flashing Blue LED only: indicate Bluetooth® is connected



 
SUNBURST GEAR
MM Series - Compact Portable Active PA Speaker

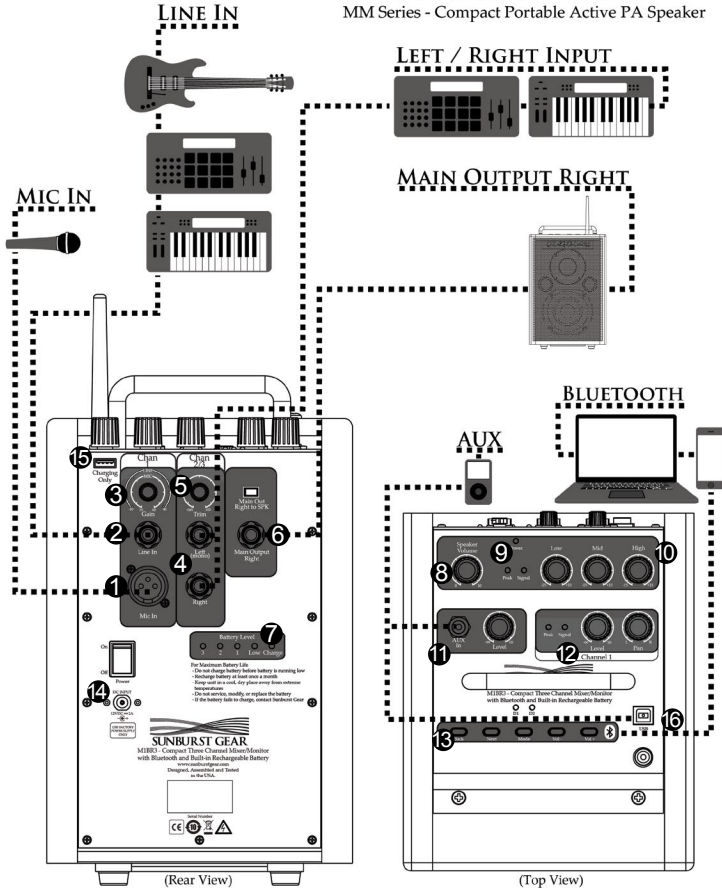

TO FULLY CHARGE SPEAKER SYSTEM

1. Put power switch in the “OFF” position
2. Plug in power adaptor into the DC input jack
3. Blue “Charge” LED will turn on, indicating the speaker is charging
4. When the speaker is fully charged, the blue “Charge” LED will turn off

 FOR MAXIMUM BATTERY LIFE

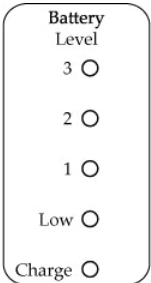

- Recharge after every use
- Use & recharge battery at least once a month
- DO NOT leave power switch in the “ON” position when it is not in use. Doing so after a long period of time will damage the battery
- Keep unit in a cool, dry place away from extreme temperatures
- Do not service, modify, or replace the battery
- If the battery fails to charge, contact Elite Acoustics Designs

WARRANTY

Elite Acoustics Designs Inc. warrants this product to be free of defects in material and workmanship for a period of 90 days from the date of original retail purchase. This warranty is enforceable only by the original retail purchaser. To be protected by this warranty, the purchaser must complete and return the enclosed warranty card within 14 days of purchase. During the warranty period EAD/Sunburst Gear shall, as its sole and absolute option, either repair or replace, free of charge, any product that proves to be defective on inspection by EAD/Sunburst Gear or its authorized service representative. To obtain warranty service, contact Sunburst Gear Technical Support via email: RMA@sunburstgear.com. PRE-AUTHORIZATION MUST BE OBTAINED BEFORE SENDING ANY PRODUCT TO A SUNBURST GEAR SERVICE CENTER. All inquires must be accompanied by a description of the problem. All authorized returns must be sent to the EAD/Sunburst Gear repair facility postage prepaid, insured and properly packaged. EAD/Sunburst Gear reserves the right to update any unit returned for repair. EAD/Sunburst Gear reserves the right to change or improve the design of the product at any time without prior notice. This warranty does not cover claims for damage due to abuse, neglect, alteration, or attempted repair by unauthorized personnel and is limited to failures arising during normal use that are due to defects in material or workmanship in the product. Any implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the length of this limited warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event will EAD Sunburst Gear be liable for incidental, consequential, or other damages resulting from the breach of any express or implied warranty, including among other things, damage to property, damage based on inconvenience or on loss of use of the product, and, to the extent permitted by law, damages for personal injury. Some states do not allow the exclusion of limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty only applies to products sold and used in the United States of America. For warranty information in all other countries please refer to your local distributor.

©Elite Acoustics Designs Inc.

- **Speakers:** 4" Woofer, one 1" Tweeter
- **Amplifier:** Class D Bi-AMP
- **Nominal Input Level (1 kHz):** CH1: -60 dBu, CH2/3: -20 dBu, AUX in: -10 dBu
- **Nominal output level (1 kHz):** Right Channel Link out: -10 dBu
- **Channel controls:** CH1: pan knob, level knob, CH2/3: level knob
- **Master controls:** Volume knob, Equalizer (Low freq knob, Mid freq knob, High freq knob)
- **Aux in control:** Level knob
- **Indicators:** CH1: signal clip, Master: signal clip, power
- **Connectors:** CH1: input jacks (XLR type, 1/4" TRS phone type), CH2/3: input jack Left/mono (1/4" TRS phone type), input jack Right (1/4" TRS phone type), AUX in: input jacks (stereo miniature phone type), Right channel output: line out jack Right (1/4" TRS phone type), DC in jack
- **Power Switch**
- **Power Supply:** AC/DC 12V
- ***Built-in rechargeable Shielded Lead-Acid battery with battery meter:** over 6 hours of play time when battery is fully charge
 - NOTE: Battery can also be charged with the 12V DC Car Battery Supply Adapter, which is included with the speaker, whether the switch is turned ON or OFF
- **Current Draw:** 2000 mA
- **Other features:**
 - Optimized front ports for extended low-frequency response
 - Magnetic shielding eliminates interference with other electronic equipment
 - Built-in pole-mount, 35mm receptacle on bottom of unit
 - **Playback from Bluetooth® device
- **Dimensions:** 8.75"L x 7.25"W x 11 .5"H

For a copy of the complete User's Manual, please visit: www.sunburstgear.com